




LAYER 1(COMPONENT)		6-LAYERS	
REALTEK		2024-11-05	
Clearance CK	False Error	00085	
Connectivity CK	False Error	00000	
Plane Check	False Error	0 / 0	
LAYER NUM		1	

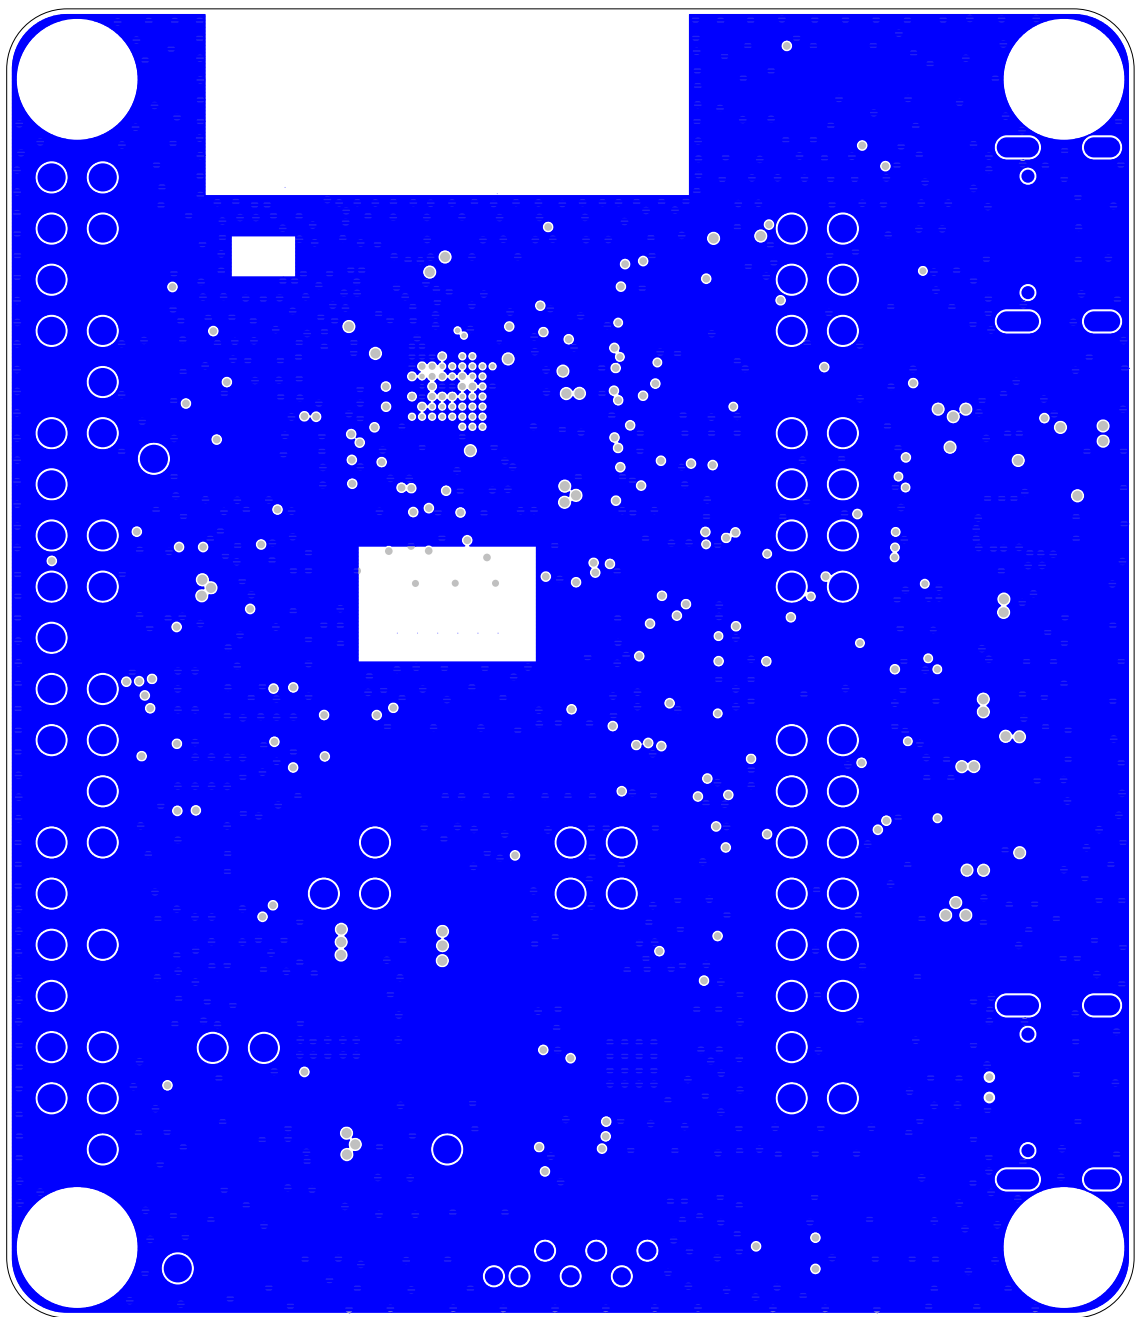


LAYER 2 (GND)		6-LAYERS	
REALTEK		2024-11-05	
Clearance CK	False Error	00085	
Connectivity CK	False Error	00000	
Plane Check	False Error	0 / 0	
LAYER NUM		2	

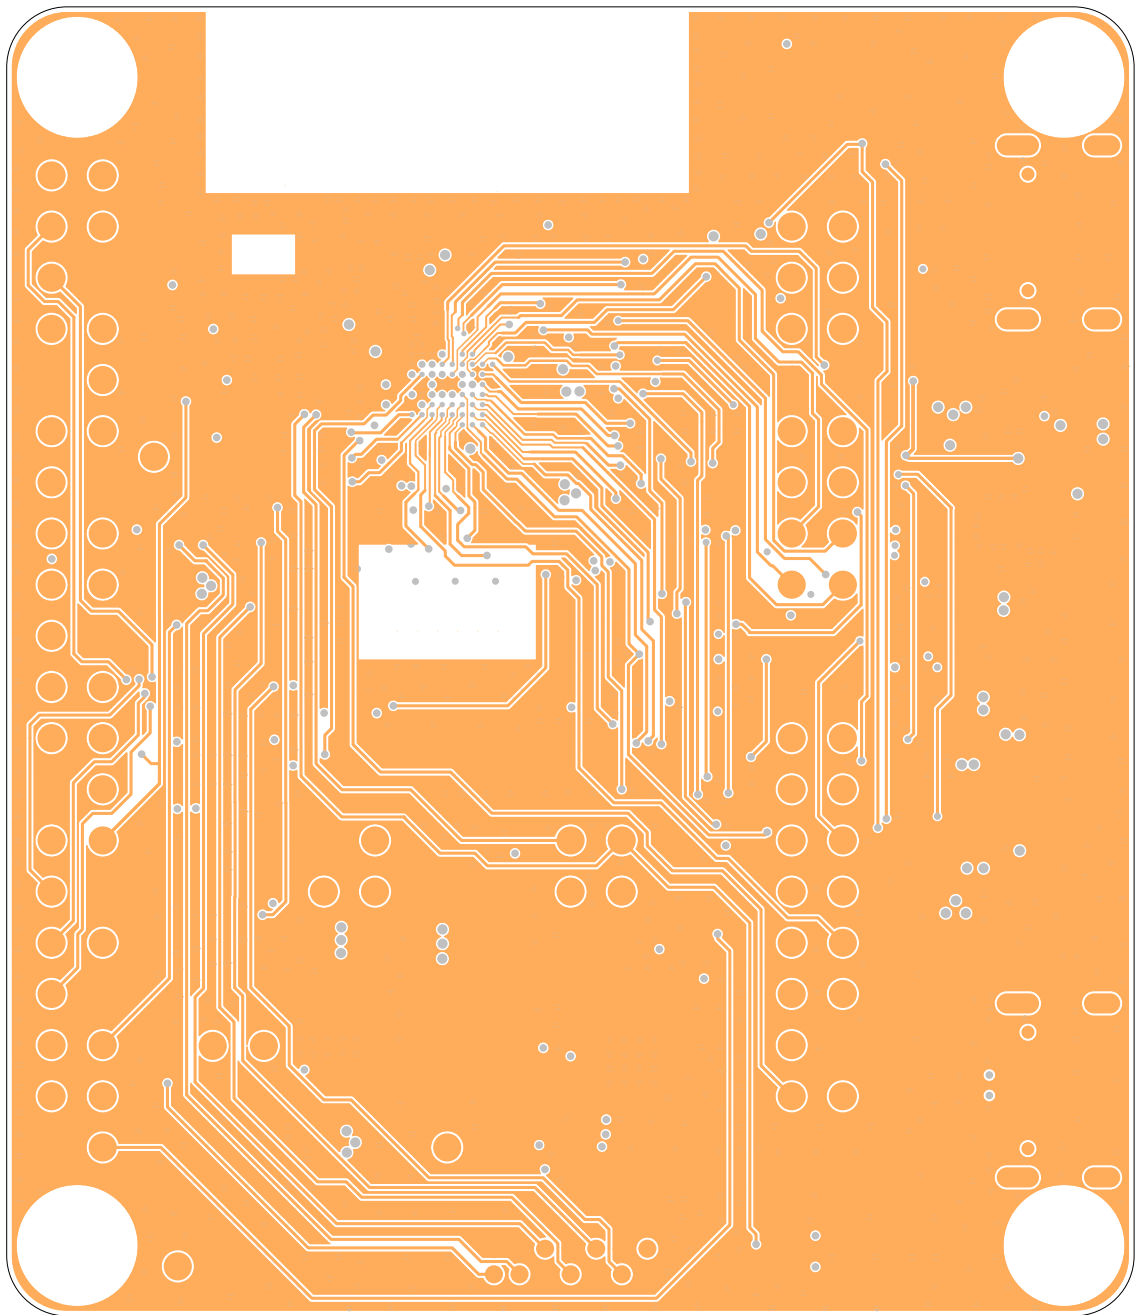


LAYER 3 (ROUTING)		6-LAYERS	
REALTEK		2024-11-05	
Clearance CK	False Error	00085	
Connectivity CK	False Error	00000	
Plane Check	False Error	0 / 0	
LAYER NUM		3	

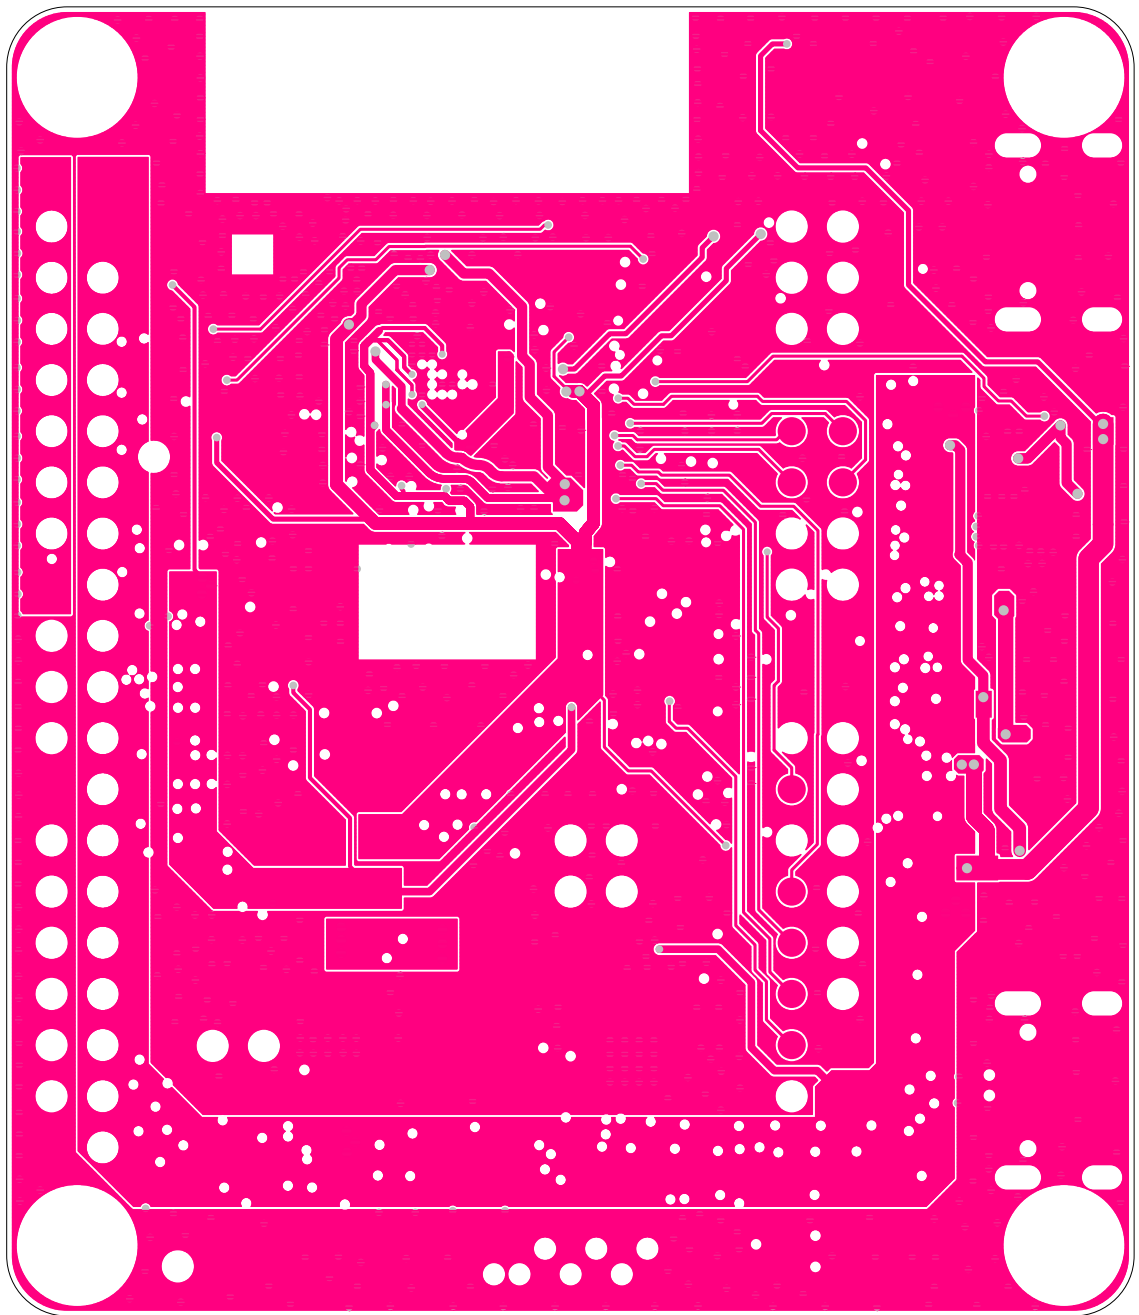


LAYER 4 (ROUTING)		6-LAYERS	
REALTEK		2024-11-05	
Clearance CK	False Error	00085	
Connectivity CK	False Error	00000	
Plane Check	False Error	0 / 0	
LAYER NUM			4

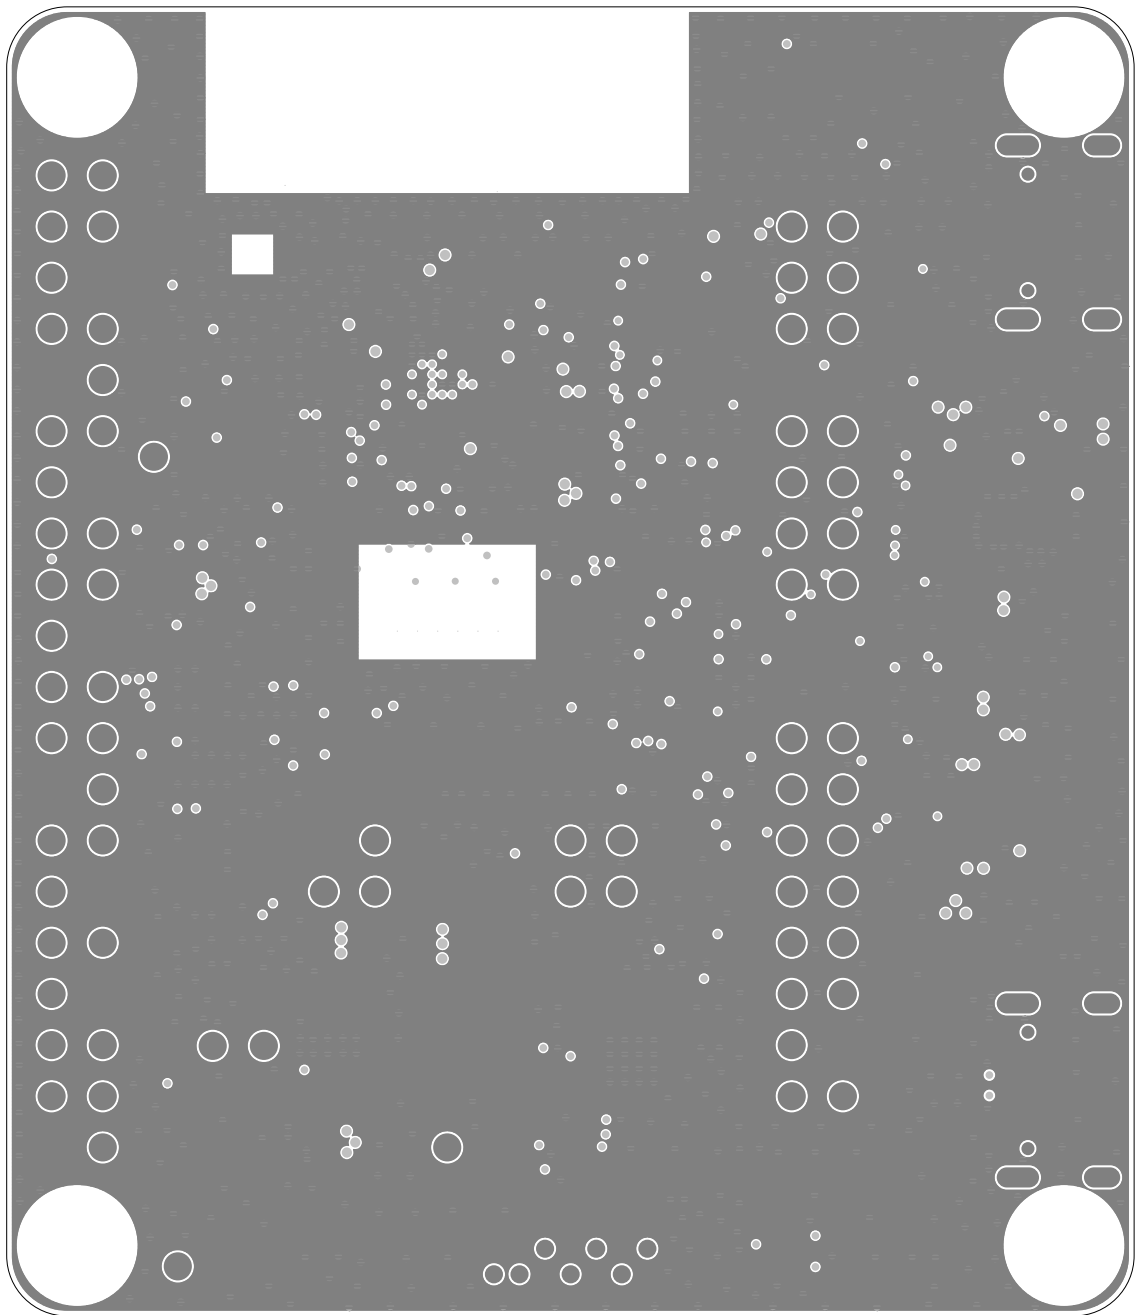


LAYER 5(GND)		6-LAYERS	
REALTEK		2024-11-05	
Clearance CK	False Error	00085	
Connectivity CK	False Error	00000	
Plane Check	False Error	0 / 0	
LAYER NUM			5

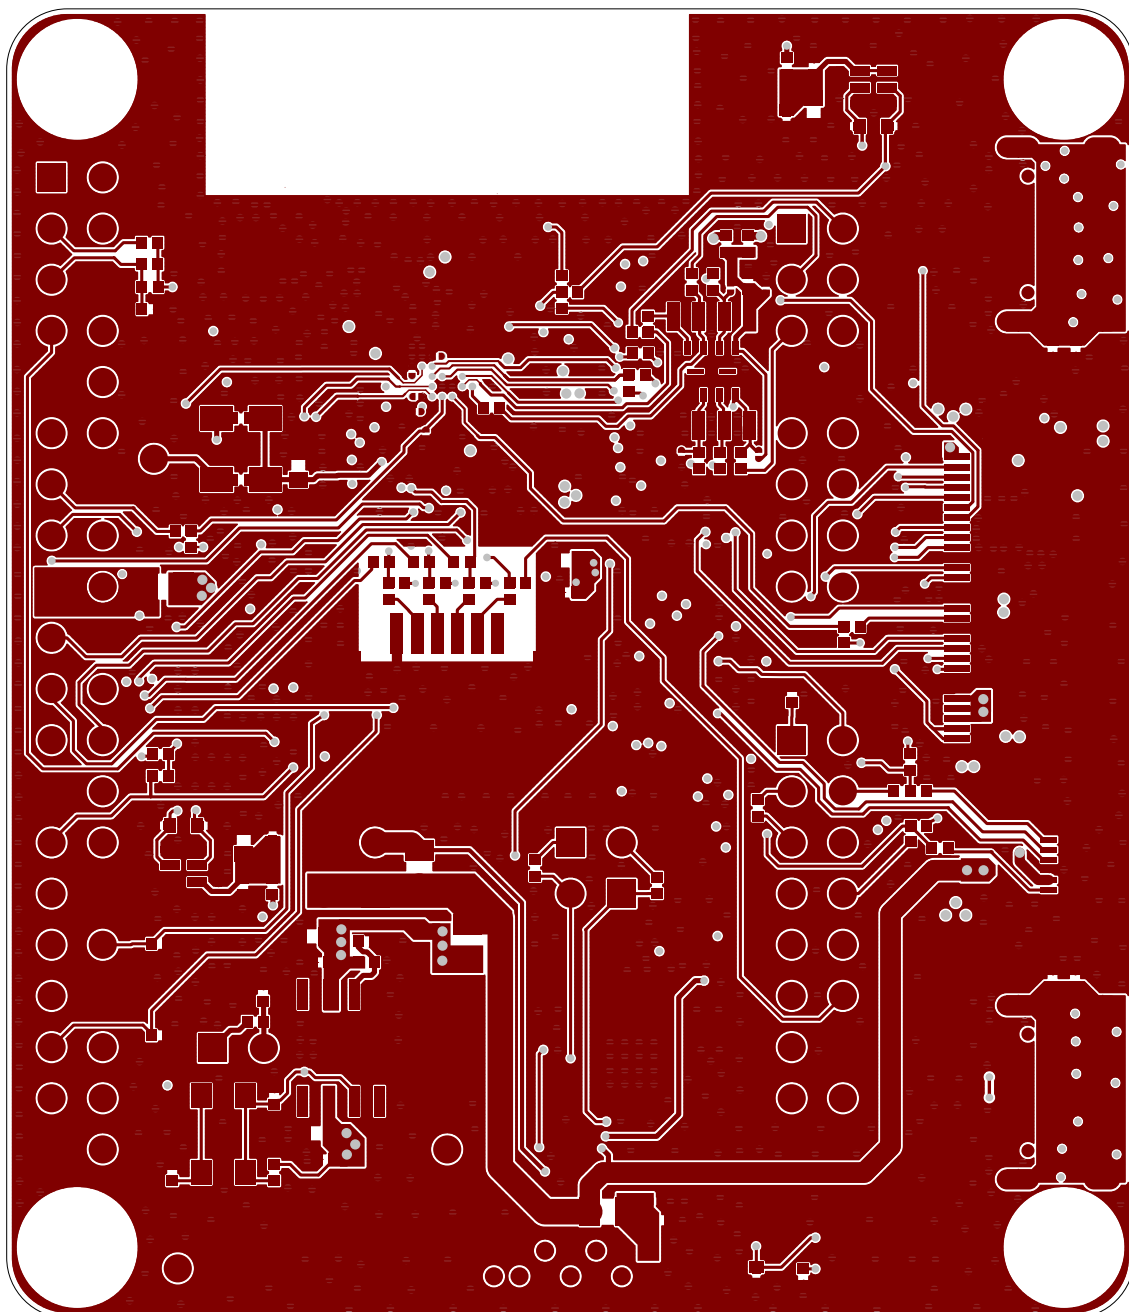


LAYER 6(COMPONENT)		6-LAYERS	
REALTEK		2024-11-05	
Clearance CK	False Error	00085	
Connectivity CK	False Error	00000	
Plane Check	False Error	0 / 0	
LAYER NUM			6

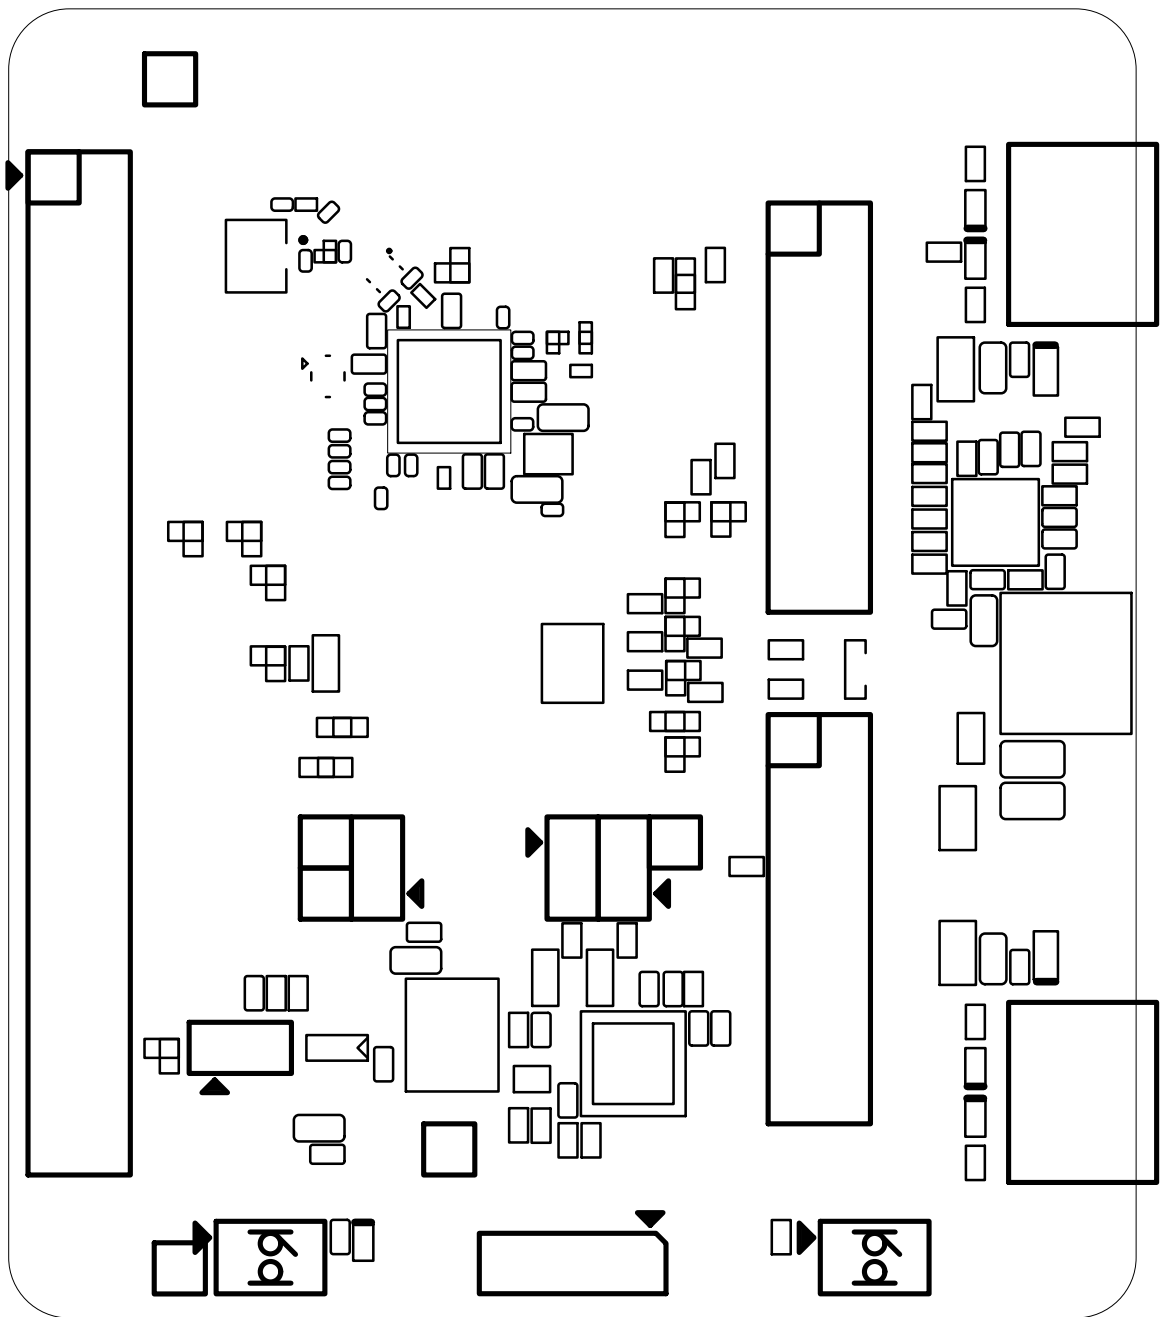

LAYER 1(COMPONENT)		6-LAYERS	
REALTEK		2024-11-05	
Clearance CK	False Error	00085	
Connectivity CK	False Error	00000	
Plane Check	False Error	0 / 0	
LAYER NUM		1	

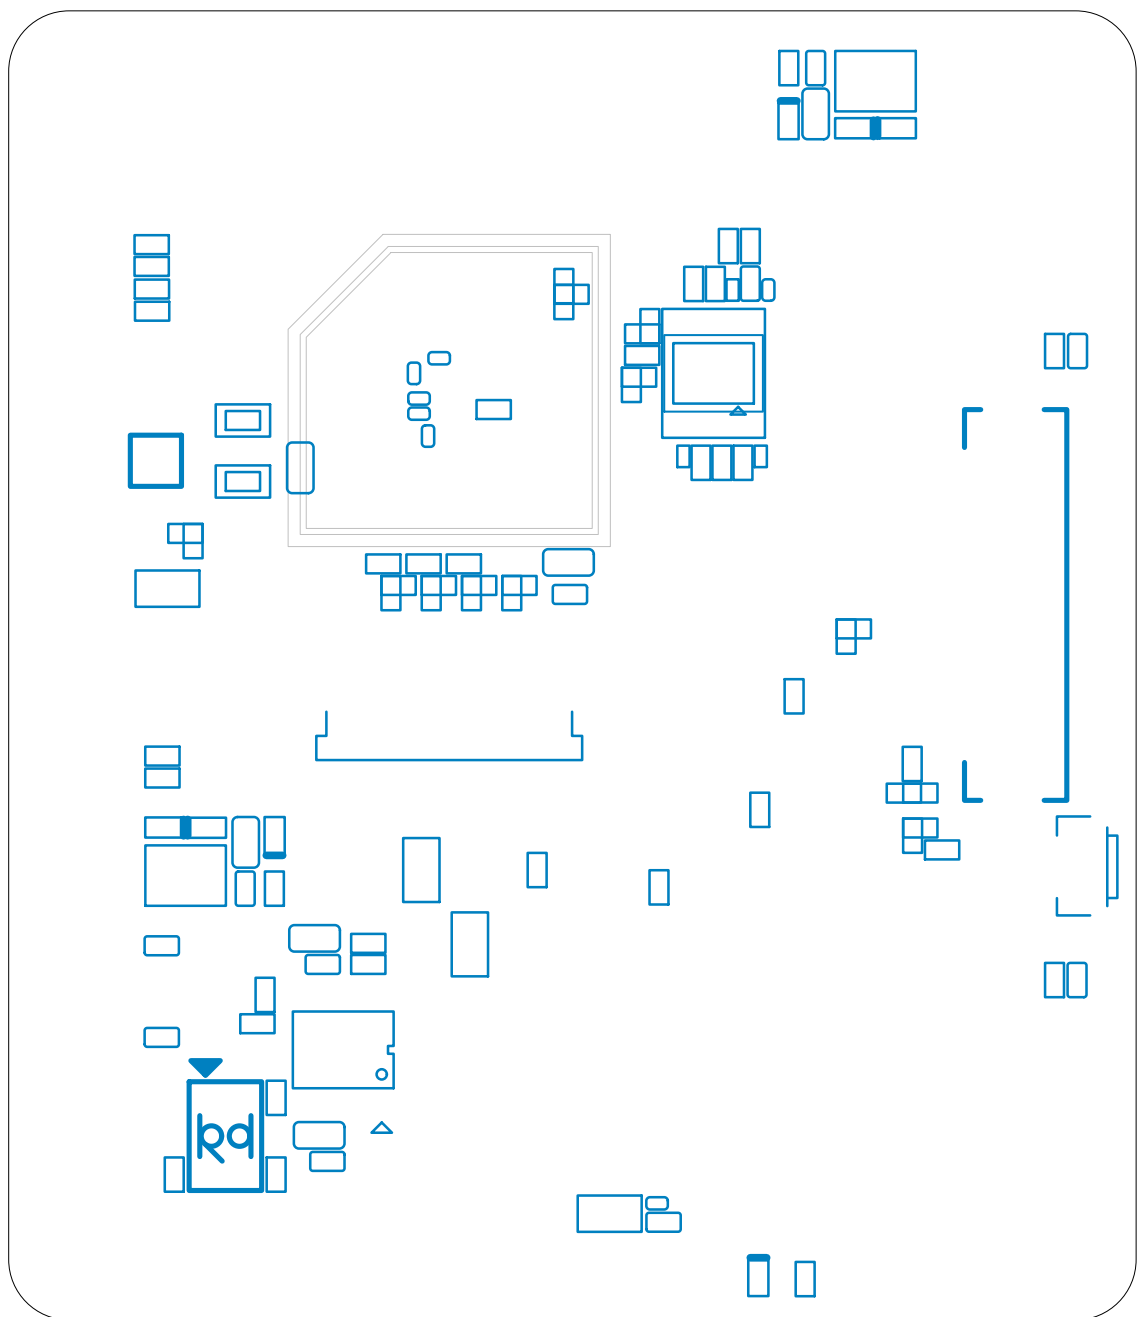

LAYER 6(COMPONENT)		6-LAYERS	
REALTEK		2024-11-05	
Clearance CK	False Error	00085	
Connectivity CK	False Error	00000	
Plane Check	False Error	0 / 0	
LAYER NUM			6

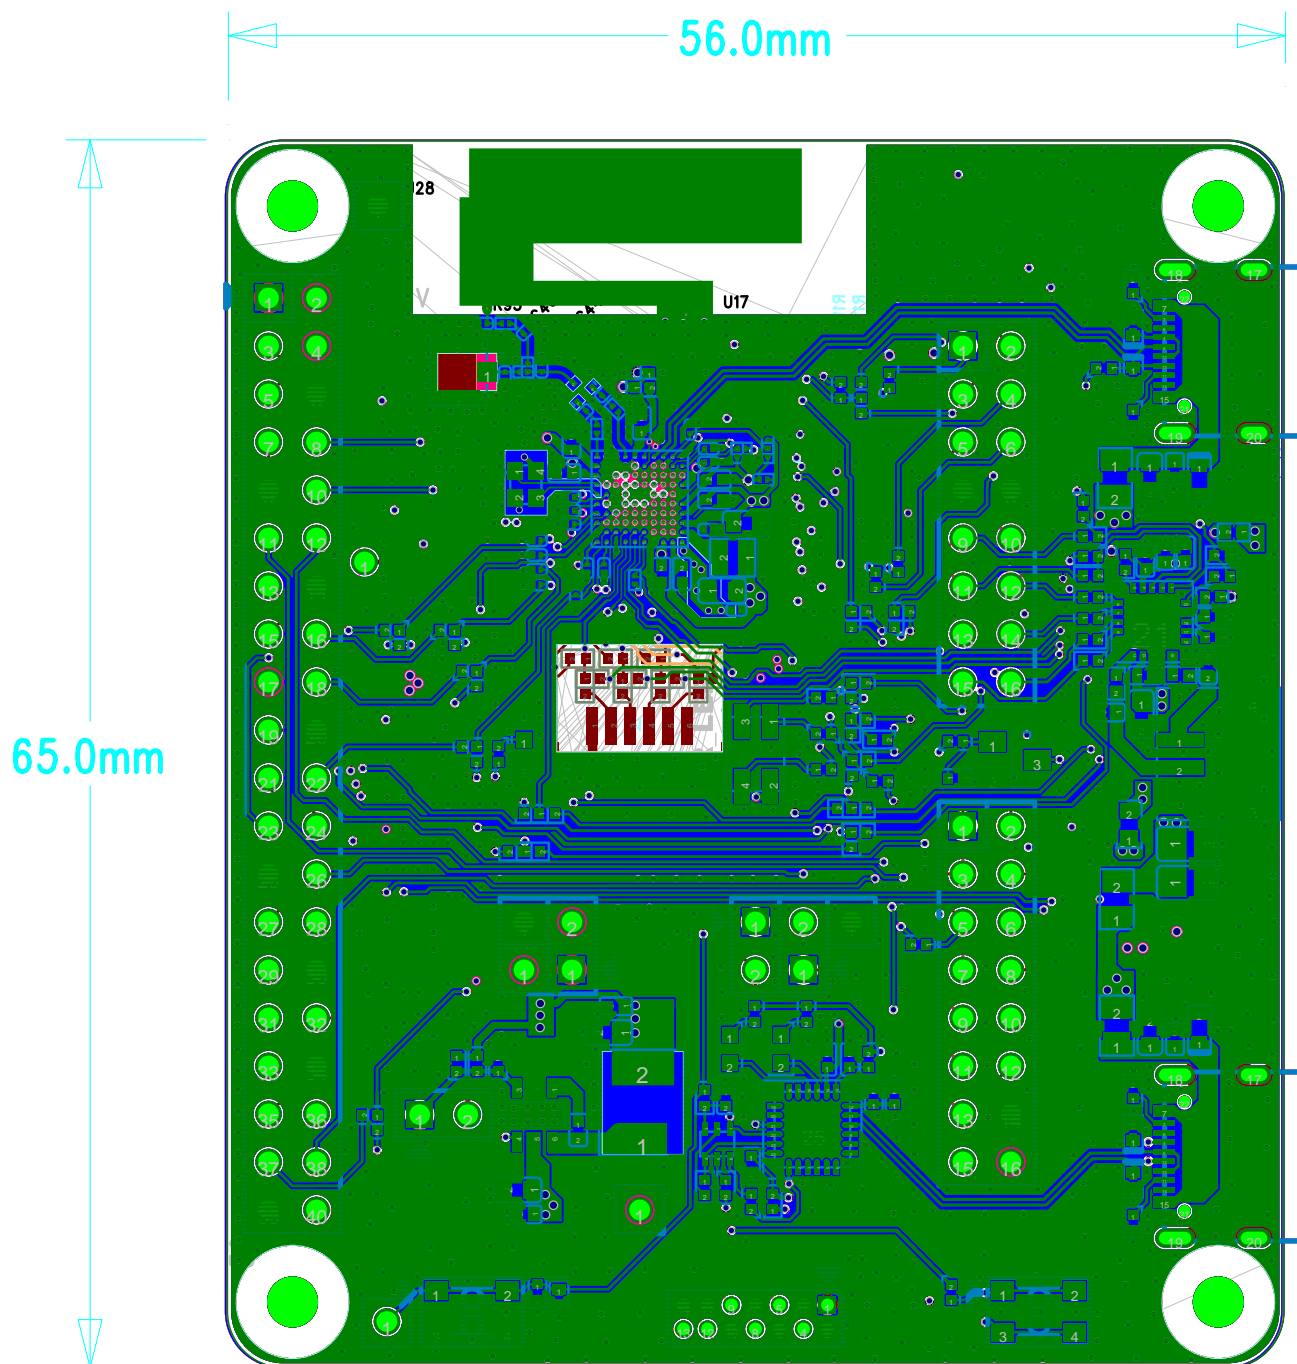

LAYER 6 (COMPONENT)		6-LAYERS	
REALTEK		2024-11-05	
Clearance CK	False Error	00085	
Connectivity CK	False Error	00000	
Plane Check	False Error	0 / 0	
LAYER NUM	1 2 3 4 5 6		